

MUTANTTM

USER MANUAL



POCKET SIZE INTERNET/FM RADIO

Quick Start Guide

Press and hold the **Power Button** for more than 3 seconds to turn on the radio. The green power indicator illuminates.

Wi-Fi Internet Radio

Slide the **Wi-Fi / FM Radio** switch on the top of the radio to **Wi-Fi**.

The radio automatically scans for available Wi-Fi network and display on the list. Select your Wi-Fi network using the **Navitation Tuning Knob** and press the **Enter Button**.

The Preferred Station will then start to play automatically if the network is connected. Once connection is made, you may press the **Back Button** to access the **Main Menu** and start to explore the world of Internet Radio.

If a secure network is chosen, you will be prompted to enter your network security key or passphrase accordingly.

Note: This security key or passphrase is found from your wireless router. Check your wireless router for details.

To enter the Key, turn the **Navitation Tuning Knob** anticlockwise for letters and clockwise for numbers.

Press the **Enter Button** after each individual character is entered.

Press and hold the **Enter Button** for 3 seconds to enter the completed key or passphrase.

FM Radio

Slide the **Wi-Fi / FM Radio** switch on the top of the radio to **FM**.

Press the **Back Button** to access the FM Main Menu.

Use the **Navitation Tuning Knob** to navigate down to Auto Program, then press the **Enter Button**.

Press the **Enter Button** to delete previously stored channels and scan for new radio stations.

User Manual

Content	
Introduction	6
Packaging and Specifications	7
Packaging	7
Specifications	7
Control Buttons	9
Internet Radio Display Types	11
Normal Screen	11
Menu Screen	11
Information Screen	12
Query Screen	13
Internet Radio Menus	13
Presets	13
Favorites	13
Bookmarks	13
Added Stations	14
Most Popular Stations	14
All Stations	14
Local Stations	14
Locations	14
Genres	14
New Stations	14

Play Preferred Station	15
Settings	15
Network	15
Delete Presets	18
Display Settings	18
Language	18
Firmware Update	19
Now Playing	20
Internet Radio Operation	20
Basic Operation	20
Powering On For the First Time	20
Normal Powering On	21
Connecting to a Wireless Network Manually	21
Playing a Radio Station	25
Storing a Radio Station	25
Playing a Preset Station	26
Adding a Favorites Station	26
Playing a Favorites Station	29
Operating the FM Radio	30
Switch to FM Radio	30
Seek Mode	31
Preset Mode	31
Channel List	32

Auto Program.....	32
Tune Mode	33
Clear All List.....	34
RDS Function.....	35
Battery Level, Charging and Indicators.....	37
Troubleshooting.....	38
Safety Warnings.....	41
Appendix A Internet Radio Menu Structure	43
Appendix B FM Radio Menu Structure.....	44
LIMITED WARRANTY.....	45
CONTACTING STI CERTIFIED PRODUCTS, INC.	45

Introduction

Thank you for purchasing Pocket Size Portable Internet/FM Radio. Now you can listen to more than 12,000 radio stations from all over the world. These stations cover all kinds of broadcastings like entertainment, news, music, sports, etc. We hope it will help to enrich your life.

The internet radio works by connecting a real-time database of radio stations, known as portal. This internet radio is implemented with portal, vTuner (one of the leaders in internet radio portal industry). vTuner constantly updates its radio station database by adding new stations and deleting those permanently off air stations.

Radio stations in the database are grouped by region, genre and interest. Once a specific radio station is selected from the internet radio station list, a direct connection is established between the radio station and your internet radio. A revolutionary radio listening experience starts from here.

To be able to use the internet radio, a wireless (Wi-Fi) router/access point, connection to your broadband internet services is required. Before you start, make sure that the wireless router/access point equipment is switched on and broadband internet service is available. If necessary, please refer to

the wireless access equipment instructions, or contact the network service providers.

Packaging and Specifications

Packaging

Before proceeding, check your packaging and verify the following accessories are included, if any parts are missing, please contact your distributor.

1. Pocket Size Portable Internet/FM Radio.
2. USB Charging Cable.
3. Carrying Pouch.
4. User Manual.

Specifications

Wi-Fi:

1. WLAN: wireless 802.11b/g, WEP / WPA security compatibility.
2. Receive more than 12,000 radio stations worldwide, using the vTuner portal.
3. 12 user definable preset stations.
4. User definable bookmarked stations.

FM:

1. Frequency range: 87.5 MHz ~108MHz.
2. Supports Radio Data System(RDS).
3. 30 user definable preset stations.


Battery:

1. Built in 1500mAh Li-ion polymer battery. More than 10 hours of continuous operation from fully charged (Power saving mode enabled).
2. Charge time about 5 hours
3. Maximum charging current: 500mA.

General:

1. Integral speaker: 2W.
2. 3.5-mm stereo earphone jack.
3. Measurements: 72.9mm*125.1mm*23.2mm(H*W*D).
4. Weight: 162.7g.

Control Buttons

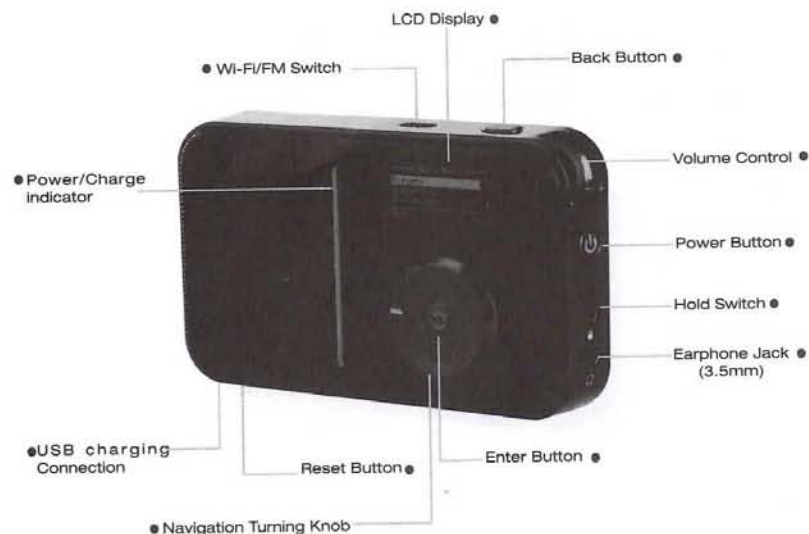

Control Buttons


Wi-Fi / FM Switch	Switches mode between Wi-Fi / FM radio reception.
Back Button	Press to go back to the previous menu.
Volume Control	Adjust the Volume control. "+" means increasing the volume, "-" means decreasing the volume.
Power Button	Power on/off by Press and Hold for 3 seconds.
Hold Switch	Lock all of the buttons except the Wi-Fi / FM Switch to avoid accidental adjustment.
Earphone Jack (3.5mm)	Connect earphones to listen to the radio or connect to an external speaker system.
LCD Display	Screen that display contents.
Enter Button	Press to confirm selections.
Navigation Turning Knob	Turn to navigate through selections.
Reset Button	If the device fails to function properly, press the button to reset the radio.
USB Charging Connection	Charge the internal battery via the USB charging connection, either directly via a computer, or using the power adaptor(Optional).

Internet Radio Display Types

Normal Screen

The normal screen is the default screen generated when the unit is powered on. It displays the station name and icons for Wi-Fi signal strength, streaming media format / preset number / frequency and battery status. It also displays any additional text available for the currently selected station in a scrolling information area.

Examples of the Normal Screen whilst playing:

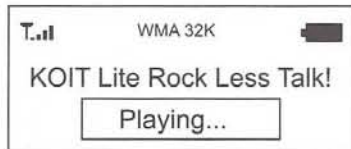


Menu Screen

A menu screen displays a list of options, with the currently selected option shown highlighted.

If more than four options are available, up and down arrows are displayed on the right hand side of the screen.


Example Menu Screen:

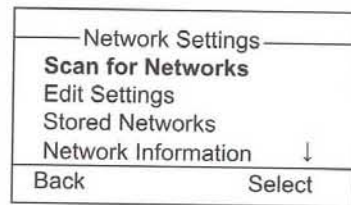

Information Screen

Information screens are used to display messages to the user. They time out after 5 seconds, unless they are used to indicate progress via a progress bar.

 Example Information Screen:



Query Screen

A query screen is used to offer the user a choice. Queries are worded so that you can respond with a yes (**Select**) or a no (**Back**).

Example Query Screen:

Do you want to revert to backup version of firmware and reboot?	
Back	Select

Internet Radio Menus

The structure of the Internet Radio's menus is shown in Appendix A.

Presets

Displays a list of preset stations. The preset stations are stored on the memory of the device. Up to 12 presets can be stored within the radio.

Favorites

Bookmarks

Displays a list of favourite stations that are saved as favorites, in the vTuner portal. Use the vTuner portal to activate the favorites function, with in your portable internet radio ! See later in this manual for personal and unique access to the vTuner portal.

Added Stations

Stations that you can add manually to the vTuner portal. This is for stations that are not already part of the vTuner database, but rather stations that you can add by yourself. See later in this manual for personal and unique access to the vTuner portal.

Most Popular Stations

Displays a list of the most popular stations, as measured by the vTuner portal.

All Stations

Once connected to the vTuner portal, this shows the top level menu to allow you to navigate down to find your desired radio station.

Local Stations

According to the current location of the radio, it displays the local stations in that country.

Locations

Choose a country and browse for a radio station in that location. Choose the continent firstly and then the specific country.

Genres

Browse for a radio station based on the genre of the stations, e.g. classic, pop, rock, etc.

New Stations

Locate any new stations which are recent additions to the vTuner database.

Play Preferred Station

Plays the Preferred Station that you have stored.

Settings

The settings menu includes the following submenus:

- Network
 - Scan for Networks
 - Edit Settings
 - Stored Networks
 - Network Information
 - Power Saving (Default is OFF)
- Deleting Presets
- Display Settings
 - Backlight Timeout
 - Main Menu Timeout
- Language
- Firmware Update
 - Check For Updates
 - Revert To Backup
 - Firmware Information

Network settings will include access point selection.

Network

The network settings menu allows you to control the wireless networks that the radio can / is connected to.

Scan for Networks

The **scan for networks** wizard takes you through the following stages:

- **Scan for networks** – When the scan has completed, displays all visible networks with an icon showing whether the network is secure or not.
 - **IP settings** – Allows configuration of either an **Automatic (DHCP)** allocated IP address or a static IP. **Automatic (DHCP)** is selected by default.
 - **IP configuration** – If static IP is chosen, you can enter the IP address, subnet mask, default gateway and DNS servers.
 - **WEP/WPA network key entry** – If the network is secure, you are prompted to enter the relevant security key. The key is entered by rotating through the characters. When the correct character appears on the display, select the character and press the **Enter Button** and continue to the next character. After selecting the last character, press for 3 seconds on the **Enter Button** to complete the key entering.
- When the wizard is complete, you are returned to the normal screen which displays the connecting sequence.

Edit Settings

This allows you to edit the network settings for the network you are currently connected to.

<Automatic(DHCP)>: Acquire the IP automatically.

<Manual(Static IP)>: Manually set the IP, subnet mask, gateway, DNS.

Stored Networks

This menu contains a list of networks that the device has previously connected to. (Max 3)

The settings associated with each network can be edited when the device is not connected to that network. You can also choose to connect to a different

network than the one automatically chosen by the device. This means that you do not have to go through the complete network setup (security key input sequence).

Select a network under this menu, it will show:

— Select Network —	
Network Name 1	
Network Name 2	
Network Name 3	
Back	Select

Select one Network Name and press the **Enter** Button, it will show:

— Network Name —	
Connect	
IP Settings	
Security Setting	
Delete	

<Connect>: Connect the network to make it as currently network.

<IP Settings>: Allows you to choose either Automatic (DHCP) or Manual (Static IP).

<Security Settings>: Enables you to enter the relevant security key.

<Delete>: Enables you to delete currently network.

Network Information

This displays the MAC address of the device, the SSID of the connected network, the IP address of the device, the Network Mask, the Gateway and the DNS server.

Delete Presets

This menu allows you to delete one or more presets from their preset list.

<All>: Allow you to delete all of the presets at once.

<Selected>: Allow you to delete the presets one by one.

Display Settings

Backlight Timeout

You have the option to select a backlight timeout of between 5 and 45 seconds in 5 second increments.

Main menu Timeout

You have the option of **ON** (a 30 second timeout) or **OFF**. (Default is **ON**)

Language

The Internet Radio supports English, German, Italian, Spanish, Portuguese and French. The default language is English. But the <All Station> menu, <Favorites> menu and the content of these menus only supports English. (Default is English)

Firmware Update

Check for Updates

If you initiate an update, the device checks for a connection and whether there is a firmware update available. If both these conditions are met, a progress screen is displayed and the firmware installed. The new firmware is flashed to the device, and in the next restart of the radio, the new firmware version becomes the master version.

Note: In the process of updating firmware, please do not power OFF. Powering OFF during the update process may cause irreparable damage.

Revert to Backup

This allows you to change the running firmware version to the backup firmware version, which is also stored on the device. The Master Version and Backup Version can be switched freely.

Firmware Information

Displays the master software version, the backup version, the boot loader version and the hardware version.

<Master Software Version>: It will show the current software loaded on the radio.

<Backup Software Version>: It will show invalid from production, but may be updated later.

<Loader Software Version>: Default version 4.1.

Now Playing

Returns to the **Now Playing** menu, and displays the current station, the battery level and the signal strength.

Internet Radio Operation

Basic Operation

Powering On For the First Time

Press the **Power Button** for more than 3 seconds, the green indicator bar illuminates and the welcome screen appears. A search for local Wi-Fi network starts automatically.

1. The radio runs the network setup wizard, starting with a scan for available networks locally. The result is a list of networks found. Highlight the network you wish to connect to (using the **Control Wheel**) and press the **Enter Button**.
2. If the network is secured, you are then prompted to enter the network key or passphrase. The Internet Radio then returns you to the normal screen, where the connection sequence takes place and then the preferred station starts to play.

Note: This security key or passphrase is found from your wireless router. See your wireless router for details.

To enter the network Key, turn the **Control wheel** anticlockwise for letters and clockwise for numbers. Press the **Enter Button** after each individual character is entered.

Press and hold the **Enter Button** (>3 seconds) to enter the completed key or passphrase.
In case of difficulty, see the section below on manual network connection, for more detail.

Normal Powering On

When the unit is powered on normally and is still within a previously known wireless network location, the radio will connect to the known network automatically and the preferred station will start to play. (If the radio does NOT have a preferred station stored, then it will play whatever station was last playing.)

If there is not a known network connection present, the powering on for the first time procedure will apply.

Connecting to a Wireless Network Manually

1. Enter the Main Menu screen by press the **Back Button** and by turning the **Control Wheel** to highlight the **Settings** option and press the **Enter Button**.

Main Menu	
All Stations	↑
Play Preferred stations	
Settings	
Now Playing	
Back	Select

Main Menu Screen

2. Highlight the **Network** option and press the **Enter Button**.

Settings	
Network	
Delete Presets	
Display Settings	
Language	↓
Back	Select



Settings Screen

3. Highlight **Scan for Networks** and press the **Enter Button**.

Network Settings	
Scan for Networks	
Edit Settings	
Stored Networks	
Network Information	↓
Back	Select

Network Settings Screen

A list of available networks is displayed when it has finished scanning and all visible networks will have an icon showing whether the network is secured or not.

	
No Security	Secure

Network Security Icons

4. Select a network (Max of 3 different networks can be stored in the radio's memory)

Note: An unsecured network may still require a level of entry authority or payment to use it. This is typically the case at airports or hotels. Only if the unsecured network has free and unrestricted access, will the internet radio work correctly. A secured network simply needs the correct access key to be input, in order to gain full access.

5. If the network is secured, you will be prompted to enter a security key. The type of security key used depends on the security method in use on the wireless network. Choose the security method from the menu. Highlight the required security method and press the **Enter Button**.

Select the WEP Encryption and press the **Enter Button**, it will show:

Key Options
WEP64 Key
WEP64 Passphrase
WEP128 Key
WEP128 Passphrase

Or select WPA Encryption and press the **Enter Button**, it will show:

Key Options
WPA Passphrase

Network Security Options Screen

6. Enter the security key.

Network Name
WEP64 Key:
00 00 00 00 00

Security Key Entry Screen

Turn the **Control Wheel** clockwise and the letters F, E, D, C, B, A will appear and anti-clock wise for the numbers 0-9. When ready, press the **Enter Button** to accept and move to the next character. Repeat the procedure to enter the second character etc. When the last character in the sequence has been entered, press the **Enter Button** for >3 seconds in order for the key code to be submitted. When the key code has been entered, the Internet Radio returns to the normal screen.

If you entered incorrect characters, please press the **Back Button** to erase the incorrect characters and enter the correct characters. If you want to cancel the network key input, please press the **Back Button** to quit the whole operation.

If network can not be connected after entering the keys, it may be due to compatibility issues between the Internet Radio and the wireless network access point (AP). Please try a different encryption method or use other wireless network access point (AP) to evaluate.

Important Note:

1. WPA keys support 0-9, a-z, A-Z, and other ASCII characters.
2. When the last character has been entered, it is important to press the **Enter Button** for 3 seconds or longer, to ensure the security key is accepted.

3. If the display shows (Network Down) or (Authentication failed! Please provide correct key). Please try again and provide correct security key.

Playing a Radio Station

1. Press the **Back Button** to go to the main menu, highlight **All Stations** and press the **Enter Button**.

Note: The **All Stations** option is only available when Internet Radio has established an internet connection and can access the vTuner portal.

The **All Stations** menu allows you to search for a radio station either by the Locations or the Genres of the station. In some cases, a list of local stations will become available as well.

2. Select a search method and browse for the required station. Use the **Control Wheel** and **Back Button** to navigate through the list of stations.

Storing a Radio Station

While the station is playing, press the **Enter Button**, it will show:

Station Menu	
Store as Preset	
Set as Preferred Station	
Add Bookmark	
Stop	
Back	Select

<Store as Preset> When the station is playing, press the **Enter Button**, the station will be stored as a preset. Next time you can select the station in

<Presets > to play it. The radio can store 12 preset stations at most. If you want to add more than 12 stations, the radio will prompt you to replace an existing preset accordingly.

<Set as Preferred Station>: When the station is playing, press the **Enter Button** to store it as the one preferred station. Any previous selection will be replaced. This station will be the default broadcast station when you power on the radio next time.

<Add Bookmark>: When the station is playing, press the **Enter Button** to store it as a bookmark. Next time you can select it from <Favorites> and then select the station in <Bookmarks> to play it. For more details on this favorites function and all the extensive features available, see detailed operation of the vTuner portal, below.

<Stop>: When the station is playing, press the **Enter Button**, the station will be stopped.
Re-select any station to resume playback again.

Playing a Preset Station

1. From the Main Menu, highlight the **Presets** option to view a list of all the preset stations.
2. Use the **Control Wheel** to highlight the station and press the **Enter Button** to play.

Adding a Favorites Station

A Favorites station is a station that has been added to the radio, using the Favorites list on the vTuner portal. To access the features of the vTuner portal, perform the following steps:

1. Login from a PC to the CSR mini-portal on vTuner <http://csr.vTuner.com>
2. Locate the MAC address of your radio (the ID#). This is a unique identifier for your product, which can not be mixed with anybody else in the world. In order to find this unique number from within your radio, follow this procedure: Press **Back Button** to get to the Main Menu--Settings--Network--Network Information--MAC Address. Record your unique product ID# (MAC address) here, without spaces or colons.

3. For the first time usage, follow the instructions on the vTuner web page to sign in with your unique ID# (MAC address) from your Internet Radio.

Sign in with your ID# From the RadioPro

Please enter the ID# for your RadioPro(more info about the ID#):



Then press here

Type your ID# (MAC address) here.

Create an account for yourself, by completing the page which follows:

Create Account Login

You need to log onto your personal Internet radio website before you can use this feature. Create a Login account to add Favorite Stations to your RadioPro with ID#: 0023cb000365

Type in your Email Address, then enter in your Password twice to verify accuracy, click the register link to continue. Please Keep track of your password since it will be used every time you log

E-Mail Address:

Password: Must be at least 6 characters

Enter Password Again:

☐ Receive program updates and special offers

This then allows you to login (in future) using your Email address and password only.

4. Use the vTuner webpage to browse through the many radio stations and podcasts that it has to offer. You can listen to any broadcast by pressing the green **Play Button**. When you find a particularly good station, you can add it to your **Favorites** list by clicking the Blue **Add Button** on the portal. The station is added to the **Favorites** list on the portal website and also to the **Favorites** menu upon your Internet Radio.

You can also add your own radio stations, should you happen to find any that are not already listed in the vTuner database. To do this, use the vTuner webpage, as follows:

My Added Stations

You can add your own stations here.

If you have found a station that is not in our list, you can add it yourself. ➔

My Added Stations

Enter the information for the station you would like to add.
The station will be immediately added as one of your favorites.

Station Name

(for example, http://62.166.116.98:8000/dsp)

Station URL

(for example, Canada, Germany, Buenos Aires)

Location

(for example, Classical, Dance, Rock)

Type:

Note: Please ensure that the station you want to add can be broadcast in PC firstly, and its audio format also should be supported by the Internet Radio. i.e Real Audio, WMA or MP3 format.

Playing a Favorites Station

From the Main Menu, highlight and select the **Favorites** option, then highlight

and select the bookmarks to access the list of favorite's folders / stations from the vTuner portal. Highlight the required option and press the **Enter Button** to play.

Operating the FM Radio


Switch to FM Radio

Move the Wi-Fi / FM Switch to the FM position. The radio will respond:



Switch to FM Radio

After a few seconds, the display will show:

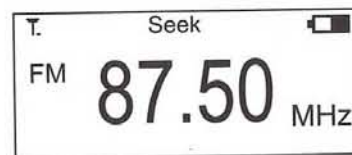


This is the **Normal Screen** for FM Radio operation. This screen shows signal strength, Radio operating mode (Seek, Preset, Tune etc) battery condition, channel frequency and any RDS information available.

Seek Mode

The default display shows the Seek Mode. To access the Seek Mode menu during normal radio operation, press the **Back Button** and Turn the **Control Wheel** to <Seek Mode> and press the **Enter Button** to enter Seek Mode.

Turn the **Control Wheel** to search for FM stations automatically. Turn the control wheel clockwise to seek in a frequency increasing direction and anti-clockwise to seek in a frequency decreasing direction.

When the search function finds a radio station, it will stop and broadcast automatically.

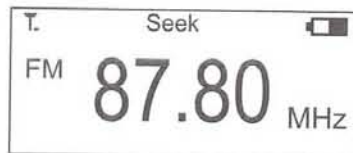


Preset Mode

The Preset Mode is used to store the desired stations. (30 stations at most) When under the Seek Mode, Preset Mode, or Tune Mode, press the **Enter Button**, to enable a quick channel selection box. Turn the control wheel to select accordingly.

Under the Seek Mode, Tune Mode, or Channel List, choose the desired stations and press the **Enter Button**, it will show channel selection box, turn the **Control Wheel** to select a channel and press the **Enter Button** for about 2 seconds. System will store the station. At the same time, the station will flash twice to show it has been stored successfully. After it has been done, system will back to the interface of original mode.

As below:

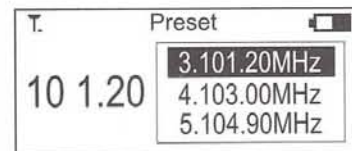

Channel List

Channel List is generated by the Auto Program function (described below). The Channel List will be updated each time you select Auto Program.

Channel List with pre-listening function, when move to a different radio station, the system will play the corresponding radio programs. Select the desired radio station and press the **Enter Button**, the system will switch to Seek Mode and broadcast it. If there are the same radio stations in the preset list, it will show the serial number of the station, if without the same stations, it will not show.

Auto Program


To access the Auto Program Mode menu during normal radio operation, press

the **Back Button** and turn the **Control Wheel** to <Auto Program> and press the **Enter Button** to enter Auto Program Mode.

The system will search the stations between 87.50MHz and 108.00MHz automatically and will show the frequency. At the same time, it will store the received stations. (30 stations at most)




The Auto Program interface as below:

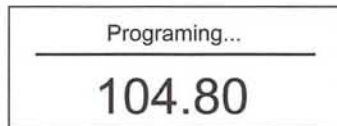

After search is completed, it will automatically revert back to the Channel List. The Channel List will show the number of received stations, any previously stored stations will have been replaced.

Tune Mode

During normal radio operation, press the **Back Button** to enter into the FM Main Menu:

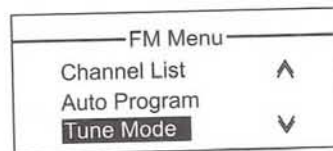

Turn the **Control Wheel** to <Tune Mode>, press the **Enter Button** to enter Tune Mode for manual tuning thereafter.

Turn the **Control Wheel** and the frequency will change by rate of 0.05MHz per step. Clockwise means the frequency increases, anticlockwise means the frequency decreases. Turn the **Control Wheel** to locate the radio stations that you want to listen to.

Clear All List

To access the Clear All List menu during normal radio operation, press the **Back Button** and turn the **Control Wheel** to <Clear All List> and press the **Enter Button** to enter the Clear All List menu.

In the Clear All List menu the radio can delete all the stations in the Preset List and Channel List.

Once selected, a screen prompt appears to confirm this action, as below:

Clear All Prestored
FM Stations?

If you confirm and press the **Enter Button**, the radio will clear all the stored stations in the **Preset List** and **Channel List** and confirm with "Clear All" The radio will then revert back to the **Seek Mode**, starting from a frequency of 87.50MHz.



RDS Function

The RDS icon will be shown after the currently playing station receives an RDS signal. The "RDS" icon will be displayed in the upper right hand corner. The RDS function will be presented gradually, as the signals become stronger. When the RDS signal is weak, the system can only display the current program type, such as **Program Type (PTY)**. As below:



When the RDS signal becomes stronger, radio will display the name of current radio station, in place of the frequency, as shown below:



When the RDS signal strength is sufficient, the radio may provide some additional radio text information. As below:



Notes:

1. In the FM mode, the backlight will remain illuminated for 1 minute before entering power saving mode. When the backlight is off, rotate either the **Control wheel** or the **Volume Control** to restore the backlight.
2. In the process of searching stations under **Seek Mode** or **Auto Program**, the system can only respond to the **Back Button**. If you want to quit searching stations, please press the **Back Button**.
3. The RDS function only supports RDS information in English.

Battery Level, Charging and Indicators

The battery level status is shown by a battery symbol upon the normal screen.

Connect the supplied USB charging cable to a PC, or use one of the mains to USB adaptors supplied, to charge the Internet radio.

When the USB battery charging commences, the power indicator glows **Red**. The battery can be charged during normal operation of the radio, however, if the radio is operating and charging simultaneously, then the charge indicator is **yellow**. When the battery is fully charged, the charge indicator goes out, or turns **green**, if the radio is in use.

When the battery is running low, the battery icon flashes.

If the battery becomes critically low, the radio will power OFF automatically and will not re-start until the battery is charged, or USB power is applied.

Note: The internal battery is NOT a user replaceable part and carries a 1 year warranty.

Troubleshooting

If problems occur when connecting the radio to the wireless network, please try as follows:

1. When scanning for a Wi-Fi network and nothing is found, please make sure your reception area has an effective Wi-Fi network coverage.
2. When scanning for a Wi-Fi network, the radio may prompt you that "You connect too many APs, please delete one and scan again." This means you have exceeded the limit of three stored networks in memory. Please remove one network from the **Stored Networks** and then scan for networks again.
3. When you have scanned for a Wi-Fi network but still can not connect to it, please check whether the selected network is encrypted. If it is encrypted, please select the correct encryption method and enter the correct key to gain access.

If still not connected, please select the Automatic (DHCP) option in the Edit Settings from the Network Menu and then try again;

If unable to connect to a Wi-Fi network, please set to "Disable Power Saving" in the Power Saving option from the Network Menu and try again;

If still unable to connect, please confirm whether the Wireless Network Access Point has firewall and MAC address filtering, if so, please stop MAC address filtering or add the device MAC address within the AP list of allowed addresses and try again;

If still unable to connect, please check whether the Wireless Network Access Point requires a fixed IP address (Static IP). If so, please select Manual (Static IP) in Edit Settings from the Network Menu. Enter the correct network information. If a connection can still not be established, please contact the network access

and network equipment suppliers.

4. When connected to the network, but not possible to get Internet Radio stations, it may be:

- (a) A server connection failure, please try again when the network is less busy.
- (b) An unsecured but protected network with some form of registration or payment required. This is typical of hotels and airports. It is impossible to pass this point with the Internet Radio, so choose another network and try again.
- (c) Interference which may be generated from other wireless equipment such as laptops, media streamers, baby monitors, cordless telephones etc. Additional interference can be generated from microwave ovens which operate at similar frequencies to wireless networks. If the Internet Radio is unable to connect or struggles to maintain a connection, simply move the radio away from the potential source of interference and try again.

5. When connected to the network, and also connected to the vTuner portal, to show Favorites and the All Stations menu, the radio will still not play a specific radio station. It may be an internet connection failure, or that the radio does not support the audio format of the selected radio station. Please select another radio station accordingly.

The station may not be broadcasting (remember it may be located in a different time zone).

The station may not be supported by this Internet Radio.

The station may not be broadcasting anymore.

The link held by the radio to the station is out of date.

The internet connection between the server (often located in a different country) and the radio is too slow.

6. Favorites don't work well. Sometimes come and go. Check the vTuner website (as per earlier in this manual) and confirm that the favorites are stored correctly.

7. Podcasts stop in the middle of the broadcast and restart from the beginning. This is caused by a break in the connection from the radio stations website, to the Internet Radio and the server connection was reset. Improve the connection quality by getting closer to the Wireless Router or wait until your network is less busy so the connection is not broken.

8. If you won't use the device for a long time, please charge the battery for one or two hours before use.

9. Product update doesn't work. Try another Network Access Point, as not all networks allow this update function, despite streaming the radio signals perfectly.

10. When a device error occurs, that can not be explained, please press the **Reset Button** to reboot.

Safety Warnings

Please read before usage.

1. If this Internet Radio has been moved from a cold place to a warm place, do not plug it in for 2-3 hours.(e.g. from a cold car boot to a warm room). There is a possibility that moisture may have condensed in the Internet Radio, this can cause damage to your Internet Radio. To avoid damage please unpack your Internet Radio and allow it to stand at room temperature for 2-3 hours before use. This will help any moisture evaporate and prevent unnecessary damage to your Internet Radio.

2. Do not remove any fixed covers as this may expose dangerous voltages.

3. Never use your Internet Radio if it is damaged in any way. Always place your Internet Radio on a flat level surface avoiding anywhere which may be subject to strong vibration.

4. Avoid extremes of temperature, either hot or cold, place your Internet Radio well away from heat sources such as radiators or gas/electronic fires.

5. Do not allow your Internet Radio to be exposed to rain, moisture or dust. If any liquid is split into your Internet Radio it can cause serious damage. If you spill any liquid into your Internet Radio switch it off at the mains immediately.


6. Caution: Do not open any covers and do not repair yourself. Qualified personnel must carry out repair work.

7. Usage of headset or earphones with maximum volume for a long period of time may cause hearing loss due to excessive sound pressures.




If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

Appendix A Internet Radio Menu Structure

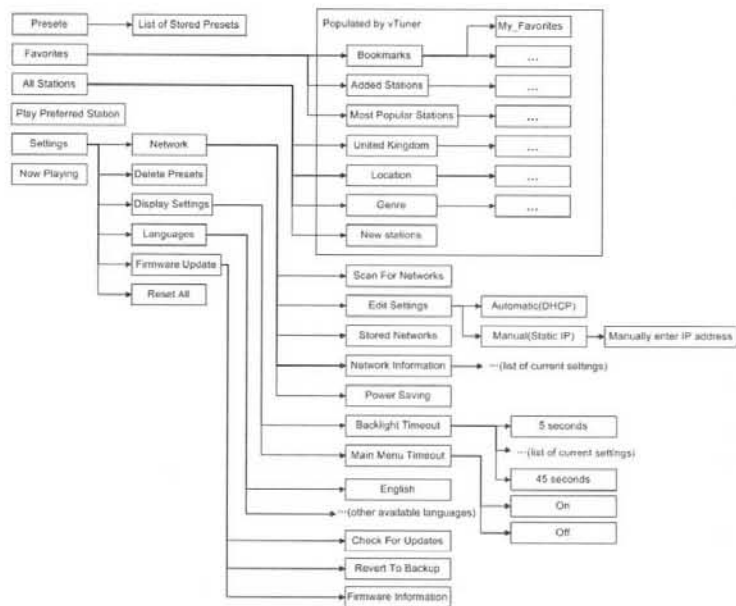

Appendix B FM Radio Menu Structure

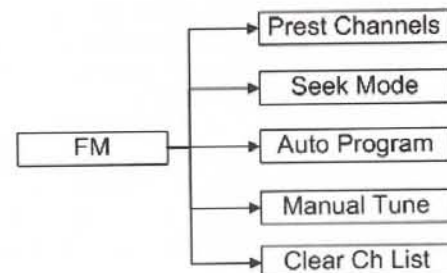

LIMITED WARRANTY

STI Certified Products, Inc. warrants to the end-user customer that the Mutant products will be free from defects in material and workmanship in one year period from the original purchase date.

Limited warranty covers only those defects that arise as a result of normal use of the product and does not cover any other problems, including those that arise as a result of: improper maintenance, operation outside the product's specifications, unauthorized modification or misuse.

STI Certified Products shall have no obligation to repair or replace until the customer returns the defective product to STI Certified Products, Inc. Any repaired or replacement product may be either new or like-new, provided that it has functionality at least equal to that of the product being replaced.

CONTACTING STI CERTIFIED PRODUCTS, INC.

If your product falls during the one year warranty period, please visit our website at <http://www.mutantinnovation.com/contact.html> to contact our customer service for product support.



www.mutantinnovation.com